


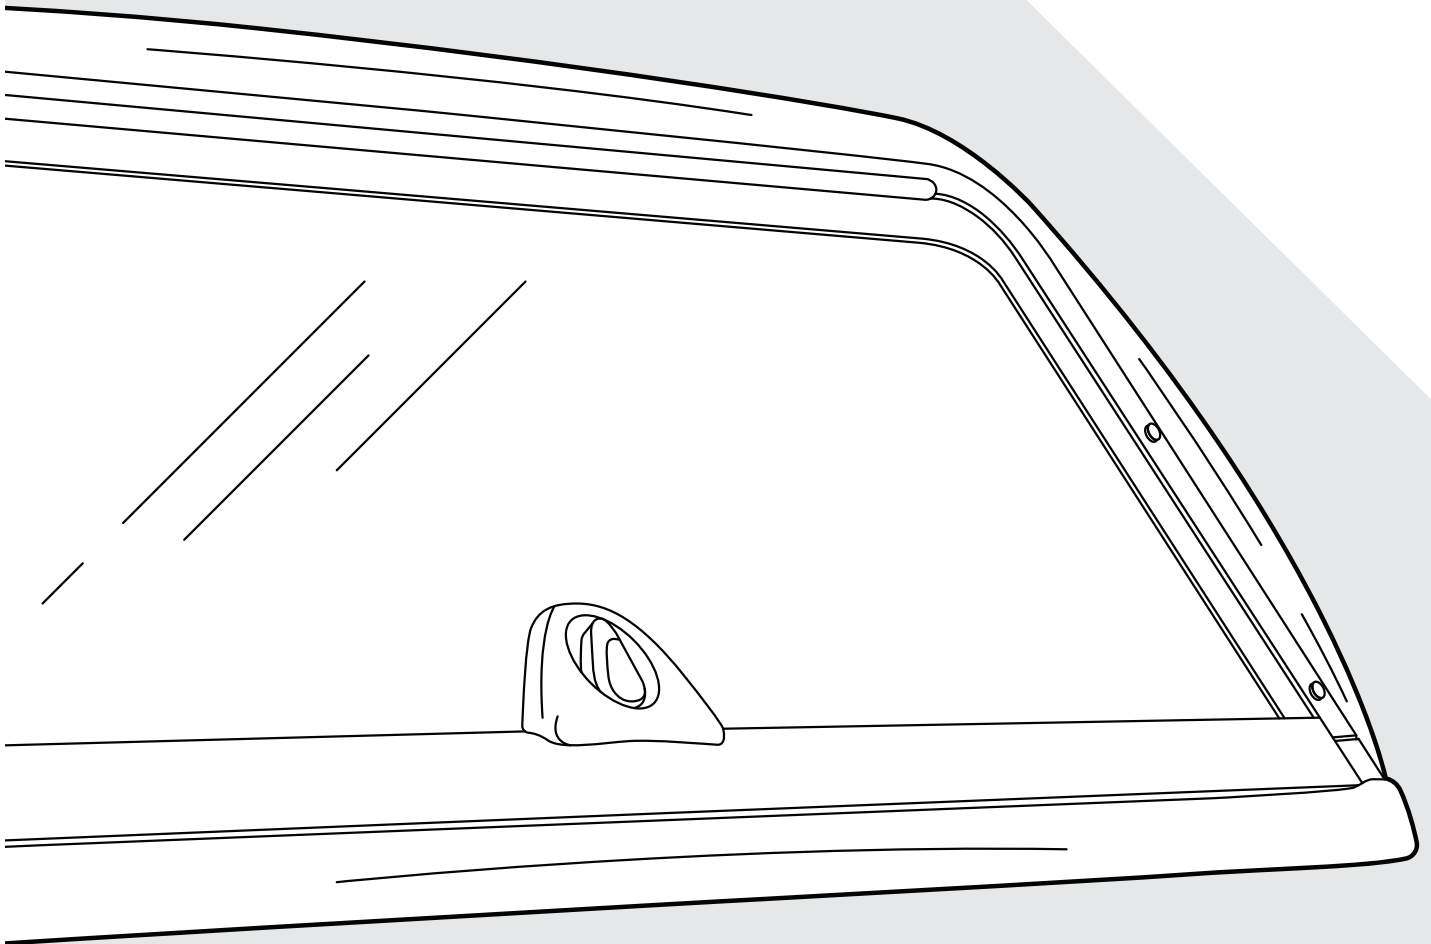


VEHICLE WIRING LOOM

INSTALLATION MANUAL

Toyota Hilux SR and SR5 2015+

COMPONENTS SUPPLIED

Central Locking Vehicle Loom - T041
Code: C7B-LOOM-T041

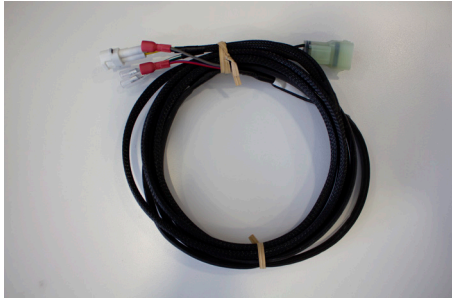

Central Locking Canopy Loom - Generic
Code: C7B-LOOM-001

TOOLS REQUIRED

Wire Cutter



13mm Ratchet Spanner



Long Nose Pliers



Auto Fastener Clip Remover

STEP ONE

Disconnect the battery. Open the LH front door of the vehicle, remove the lower scuff plate by prising them upwards.

**STEP TWO**

Remove the passenger side front kick panel.

**STEP THREE**

Remove the glove box, locate the fuse box.


**STEP FOUR**

Unpack the vehicle patch loom FEVTH01.





STEP FIVE


Locate the white 20 way connector in the kick panel area, disconnect it from the receptacle.

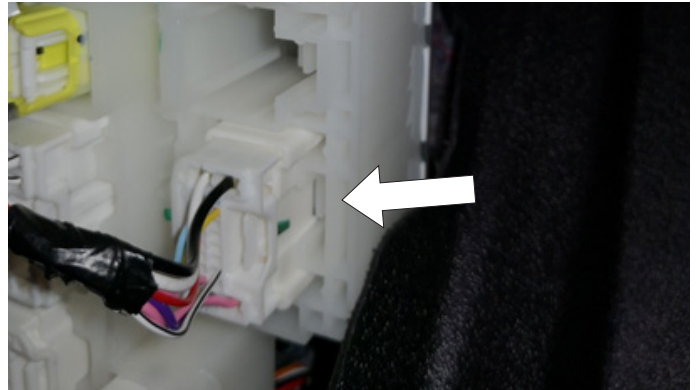**STEP SIX**

Plug the white 20 way plug on the vehicle patch loom (FEVTH01) to the receptacle in the kick panel area, connect the white 20 way socket from the vehicle patch loom to the original plug from vehicle harness.

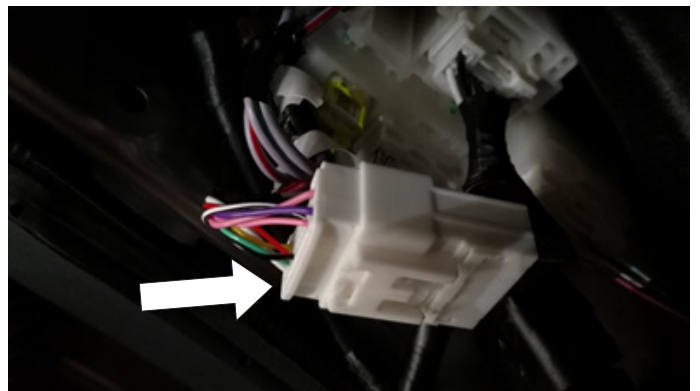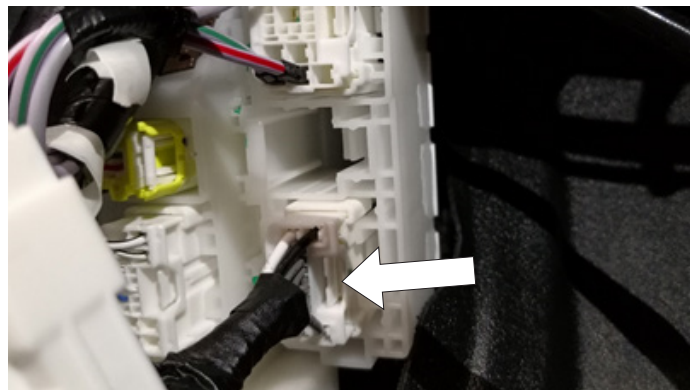**STEP SEVEN**

Uplift the carpet at the front door passenger side, locate the grommet on the floor near the side kick panel, remove the grommet.

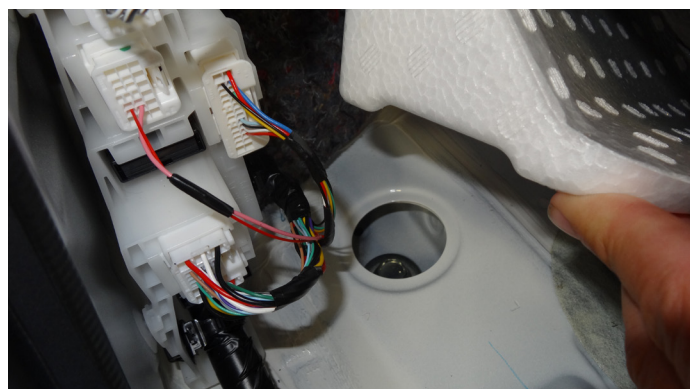


STEP EIGHT

Run the lid connector (6 way white) and the vehicle loom through the hole down to the chassis, seat the grommet into the hole.

**STEP NINE**

Tie the loom along chassis towards LH tail light, away from brake lines and exhaust systems.

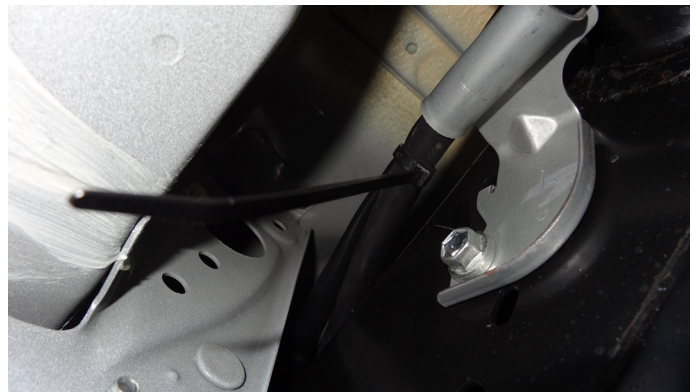**STEP TEN**

Unscrew the LH tail light, pull the light outwards to the side of the vehicle to disengage it from the tub. Run the lid connector from chassis up to the space behind LH tail light.

**STEP ELEVEN**



Connect the lid connector to the 6 way female connector on generic canopy loom (FECAN01).



STEP TWELVE

Go back to the passenger front fuse box shown. Remove the 10 amp fuse (4th fuse holder from the bottom) replace with supplied fuse holder containing 2 fuses .

Ensure 7.5A fuse is at rear of fuse amp holder, as per diagram.

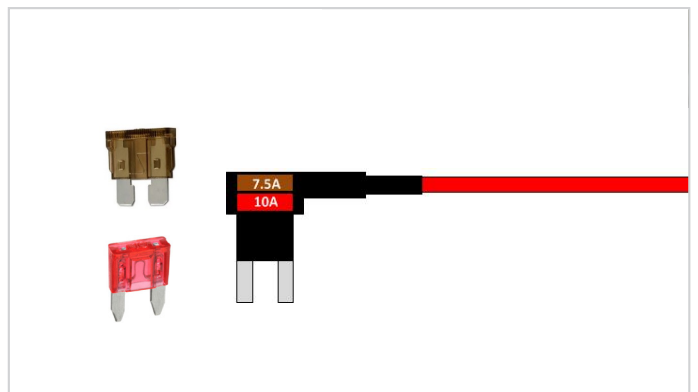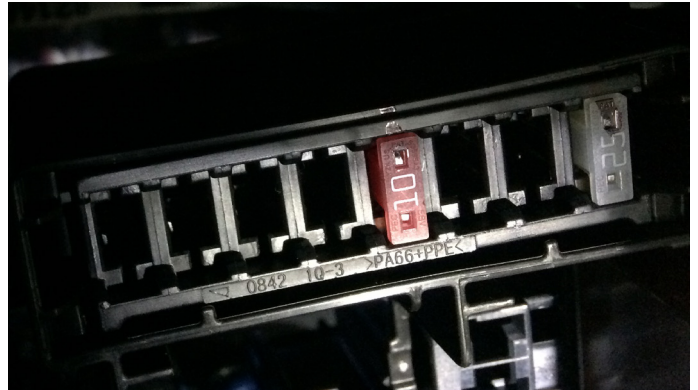


STEP THIRTEEN

Locate the mounting bolt above the white connectors in kick panel area. Place the ring terminal on the vehicle loom to the back of the bolt and secure it in place with an M6 flange nut.



STEP FOURTEEN

Make sure the relay box is connected to the vehicle loom. Cable tie the latching relay module to the vehicle's existing wire harness nearby, tie up any excess lengths neatly.

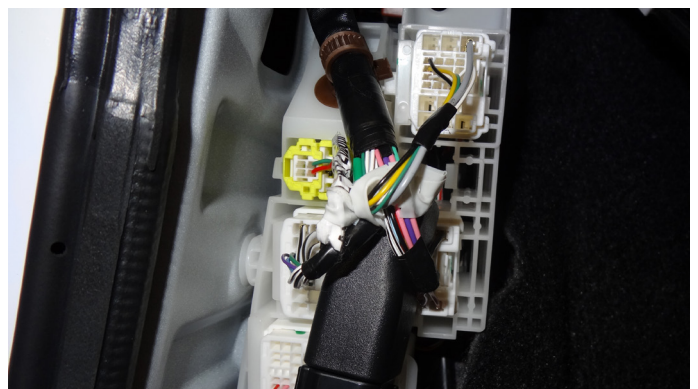


STEP FIFTEEN

Close all doors and do a functional test.

- Press Lock on remote, check canopy window which should be locked.
- Press Unlock on remote, check canopy window which should be unlocked.

 Make sure all the above checks pass, then put back the LH tail light, refit the kick panel and scuff plates in front door area.





Customer Service (NZ)	0800 111 000
Customer Service (Int.)	+64 7 850 7000 (08:00 - 17:00 NZT)
Support	sales@fullyequipped.co.nz
Website	www.fullyequipped.co.nz
Address	2 Tasman Rd, Te Rapa, 3200, Hamilton, New Zealand