


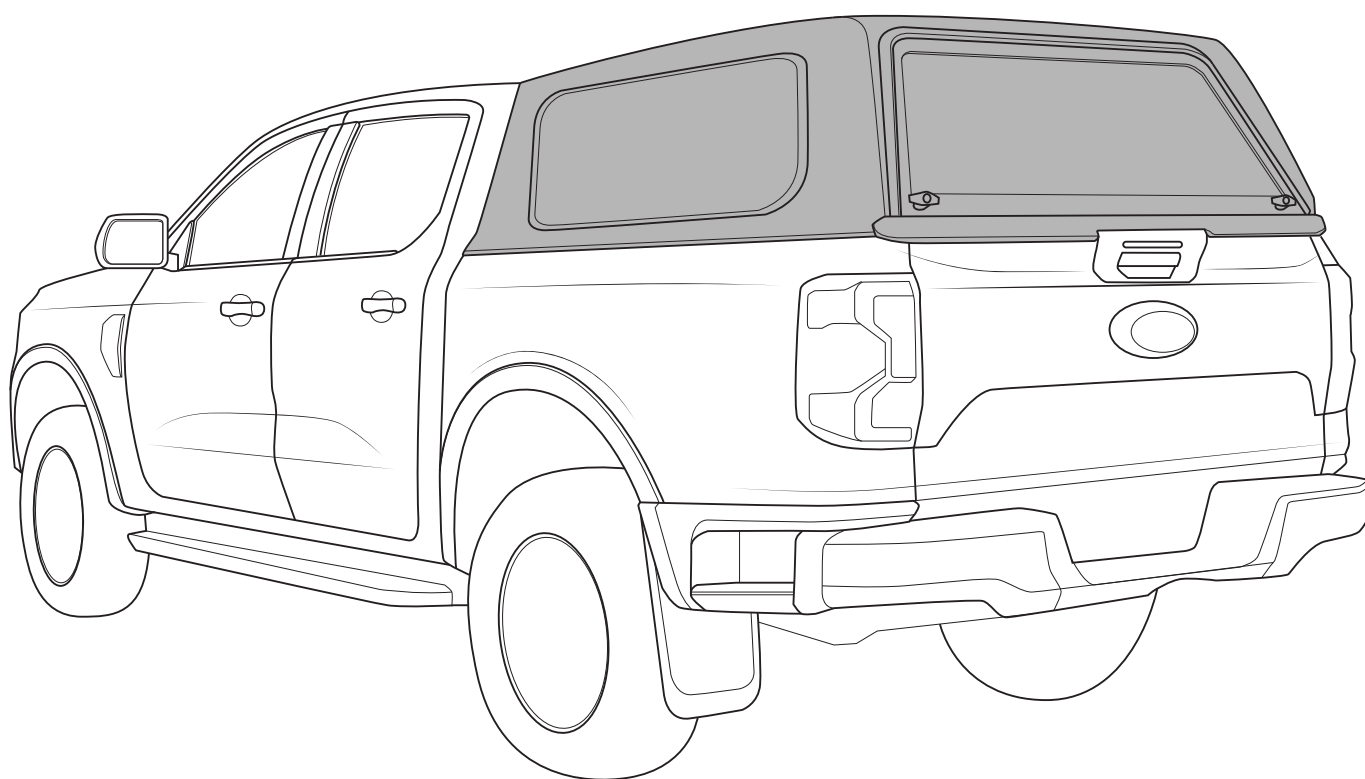

Canopy Fitting Instructions

General Notes

- Read through the fitting instructions before installation of accessory. Install accessory as described. Do not use any other mounting method other than described in this instruction. Failure to do so may cause damage to the vehicle or the accessory.
- It is advisable to seek assistance of another person when installing this product.
- Do not repair or modify the accessory and/or its mounting hardware in any way. Repairs or modifications may affect the operation of the accessory and can result in non-compliance with vehicle safety requirements, which may result in serious injury or death.
- Do not remove any labels from the accessory.
- If damage or concerns are identified that may interfere with the installation of accessory, or affect the function or safety of the vehicle, inform the customer prior to proceeding with installation.
- Ensure special care is taken to prevent any damage to the vehicle and the applicable repair manual is followed. Safely store and protect any removed vehicle components.
- Fully Equipped LTD. recommend that this accessory is fitted by a qualified Fully Equipped LTD. Technician.
- Ensure all recyclable discarded vehicle accessory components and packaging are recycled following local recycling regulations.

Installation

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.




Parts Supplied

A.




Ford Ranger Canopy x1

Parts Supplied

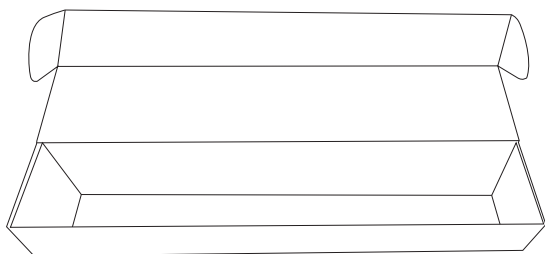


Boxed Parts

B.

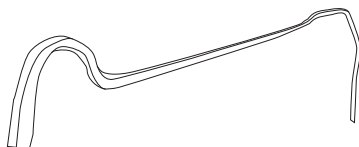

Canopy Seal (10mm x 4mm x 9mtr roll) x1

C.




M8 x 35mm Hex Bolt x 4

D.




M8 Spring Washer x 4

E.

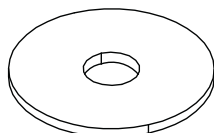


3mm x Ø32 Penny Washer
x 4 (Rubber)

F.

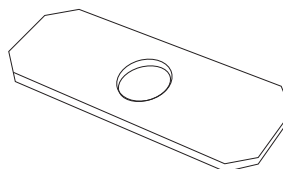


M8 x 32mm
Fender Washer x 4

G.

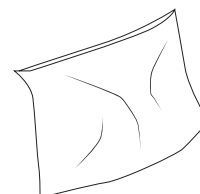

Protective Kit FORD
RANGER


Tools Required

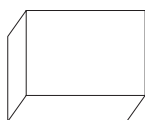


Spacer Blocks
(10mm thick)




Power drill with
14mm bit



Scissors



13mm Spanner

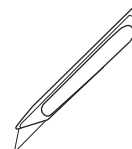



Knife



Cleaning Cloth



Step 1

Clean the vehicle cab rear window, and the outside front canopy window.

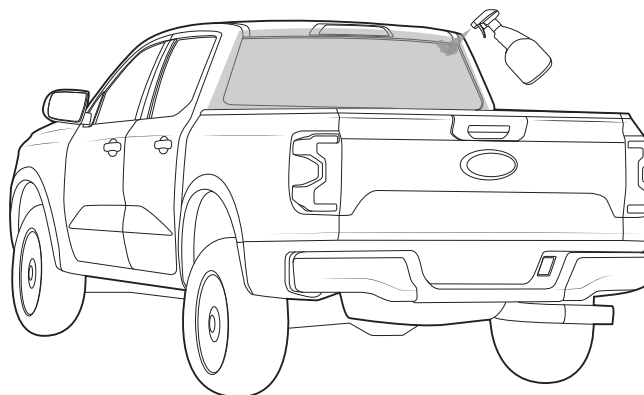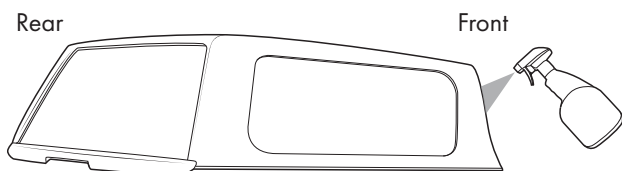



Step 2

Remove the combing rail trim and clean the wellside combing rail surface.

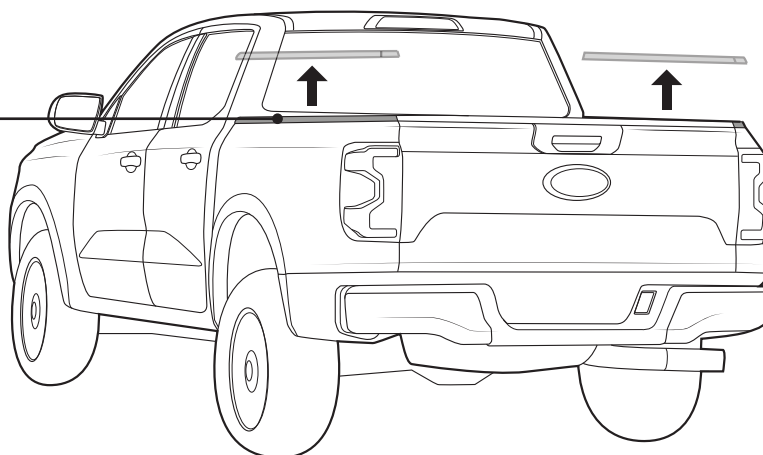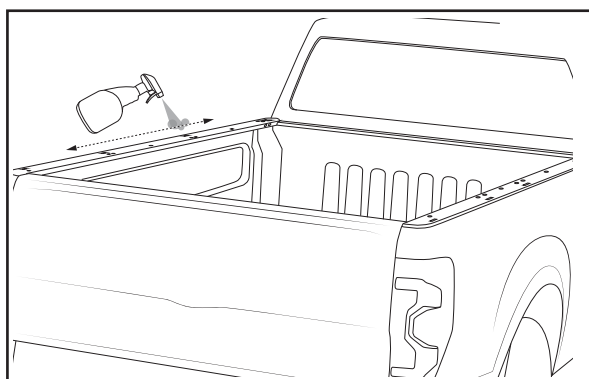



Step 3

Using the 20 pieces of pre-cut tape in the protective film kit, **seal all the combing rail cut outs.**

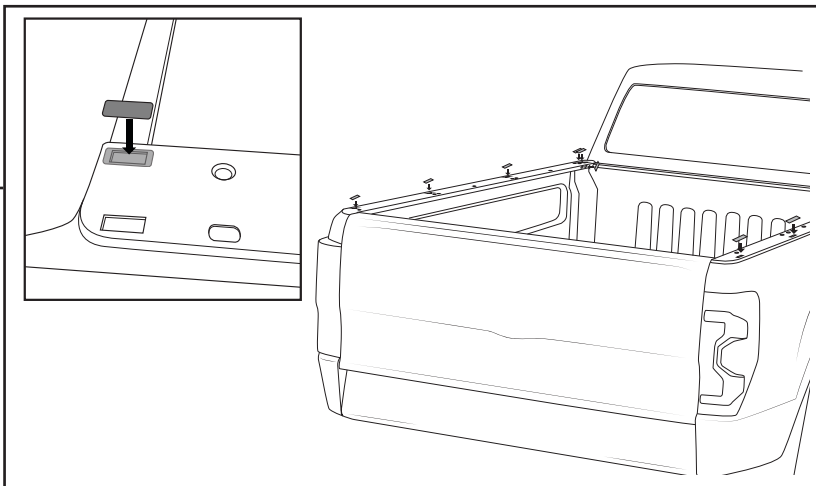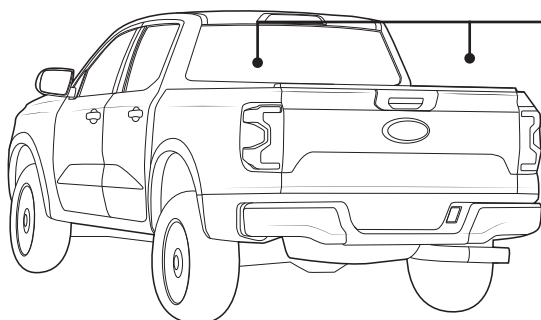

Step 4




Fit four M8 threaded studs (not included) into the threaded holes aligning with the canopy Base rail fitting locations.
Fit 3 mm thickness rubber penny washers over the studs.

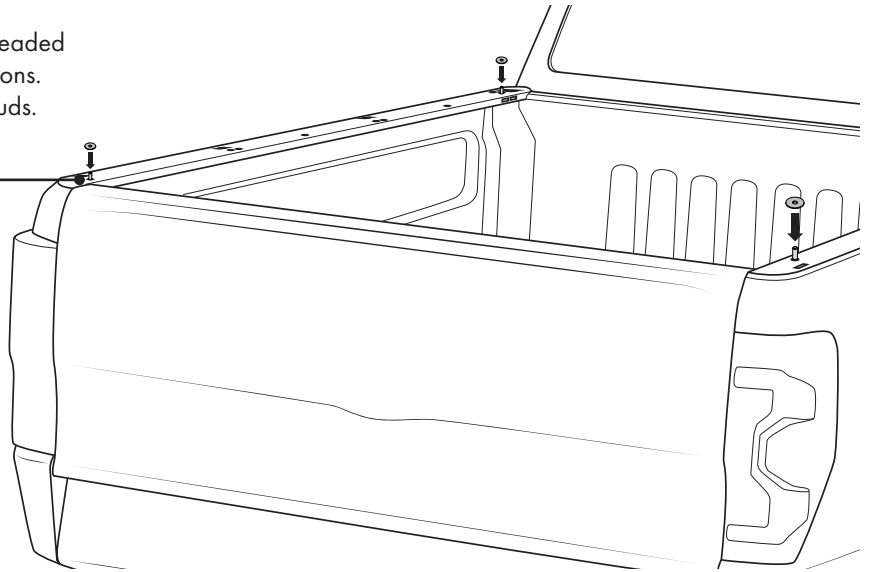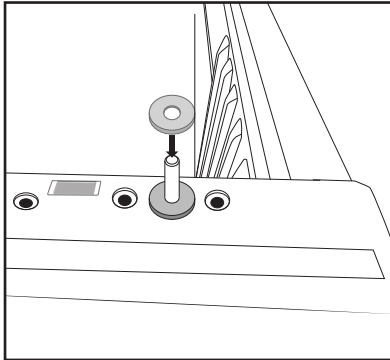

Step 5



Apply a double layer of butyl sealant (provided in the fitting kit) outside of the fixing points and inside the outer row of sealed cut out holes.

IMPORTANT: Keep the butyl sealant tight to the fixing points. As pressure is applied the sealant could spill out the sides of the canopy, if care is not taken.

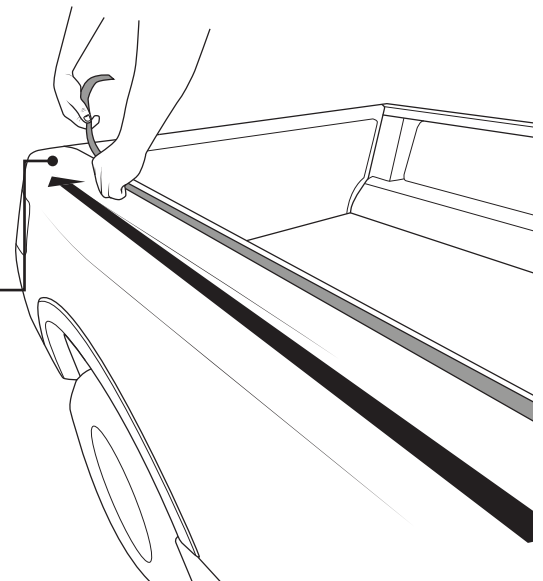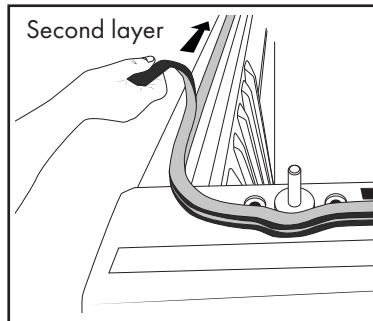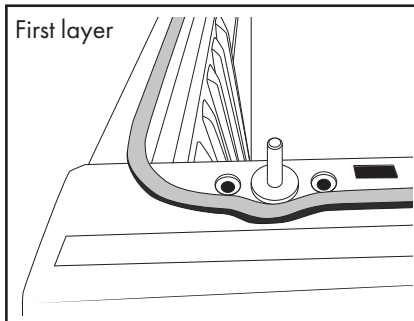



Step 6

Position four spacers (with thickness greater than that of the double layer of sealant) adjacent and outside the fixing points to allow alignment of the canopy without contacting the high tack sealant.

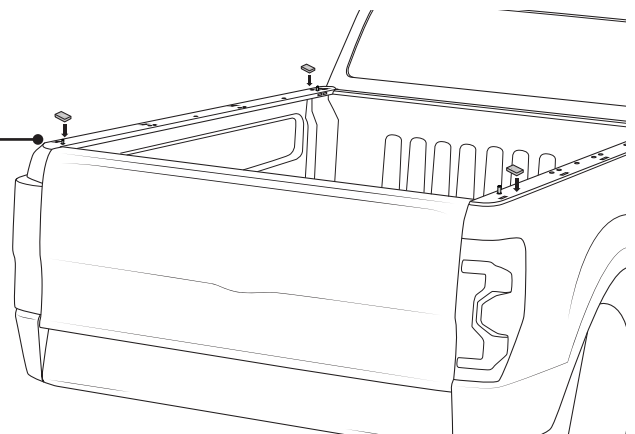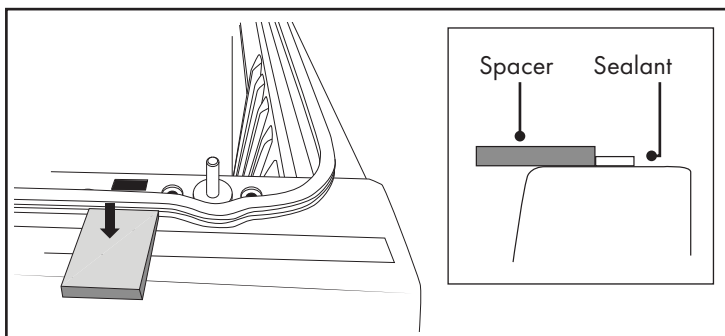

Step 7



Drill out the fixing holes on the canopy to 14 mm to allow positioning adjustment.

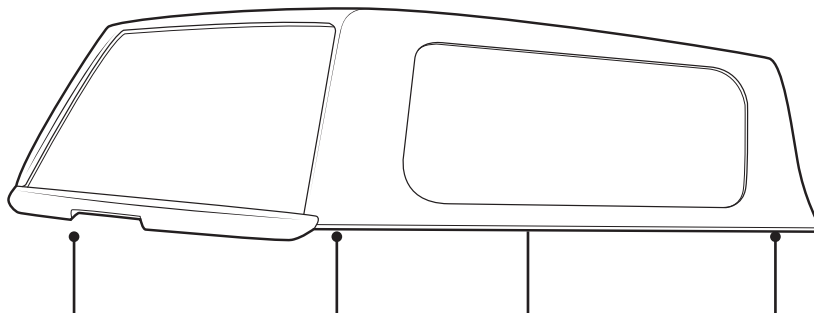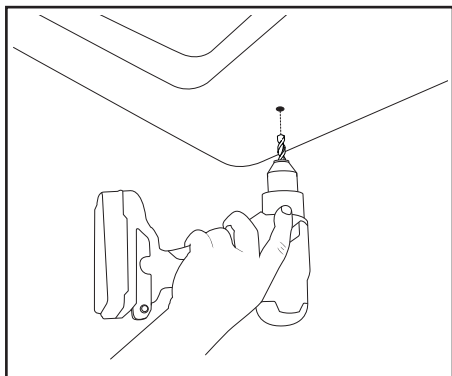

Step 8


Place canopy onto the well-side in the desired location, so that the rear door engages with the tailgate. Check that the canopy is centered left to right.

It's recommended to use a towel or sheet of cardboard to protect the cab of the vehicle when installing the canopy.

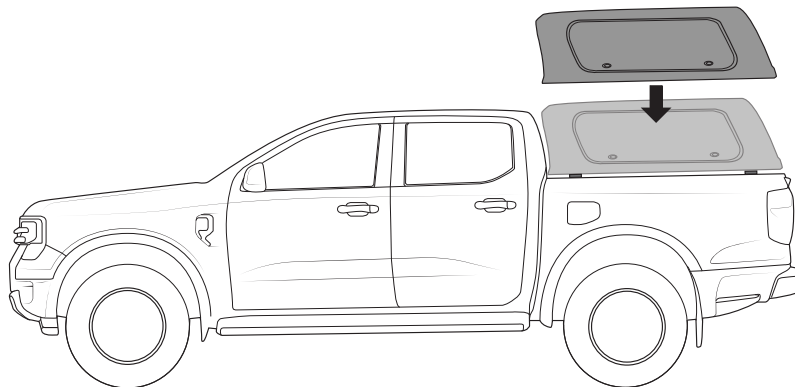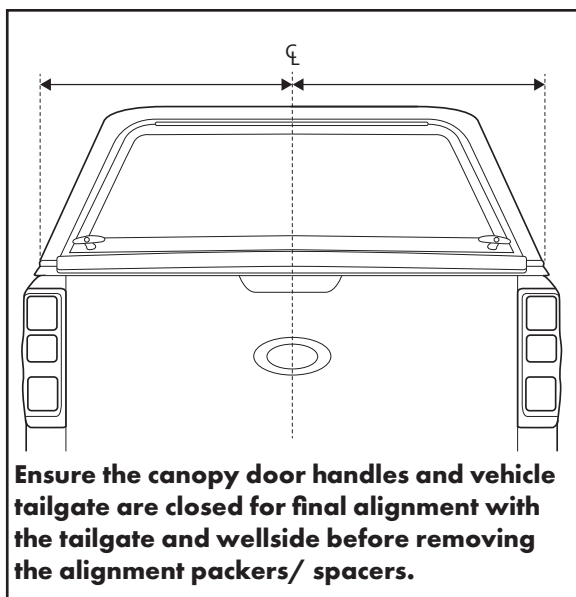

Step 9



With the canopy aligned, remove the packers/ spacers, allowing the canopy Baserail to contact the bitumen sealant.

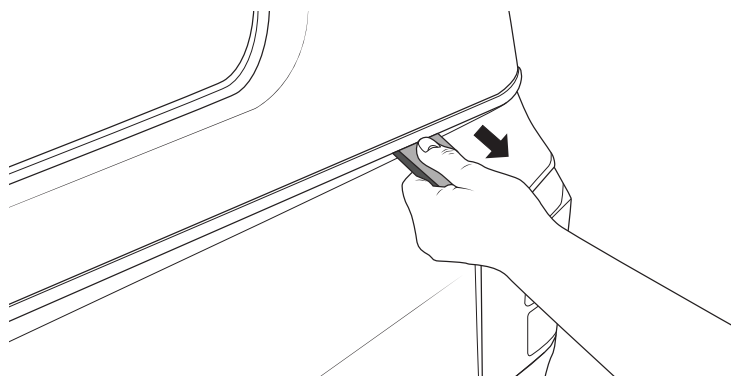

Step 10

After removing the M8 threaded alignment studs, use the M8x35mm bolts, spring washers and fender washers from the canopy fixing kit and bolt the canopy to the wellside in all four corners.



Note: Torque the canopy (5Nm) over two or more steps, with settling time in between. It will allow the canopy to be clamped down further without over-torquing. Torque and mark each bolt one at a time.

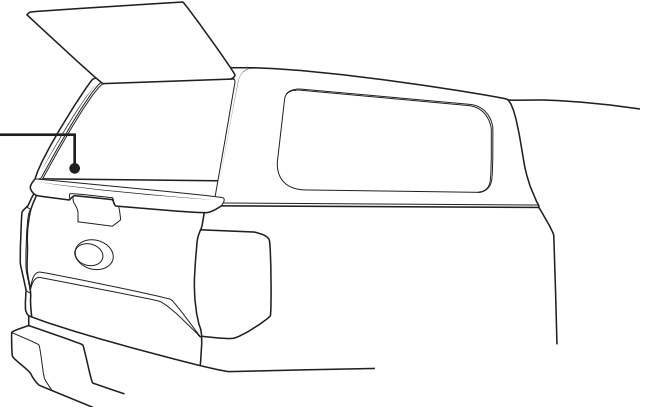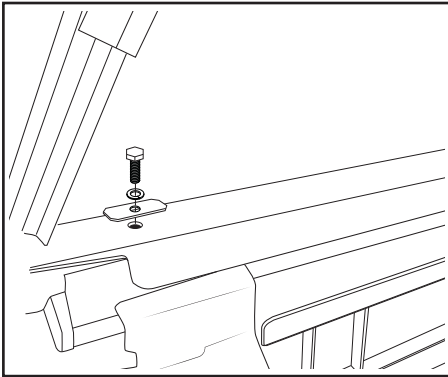

Step 11

Fit the LH & RH protective film to the tailgate and corners by wetting the tailgate with a mixture of water and Isopropyl Alcohol and then floating the film into place on the wet surface while eliminating any air between the two surfaces. Next, use a squeegee to remove the water solution between the two surfaces.

Note: The protective film is custom cut for the Ford Ranger tailgate with left- and right-hand sets for the tailgate and corner piece to go above the taillights.

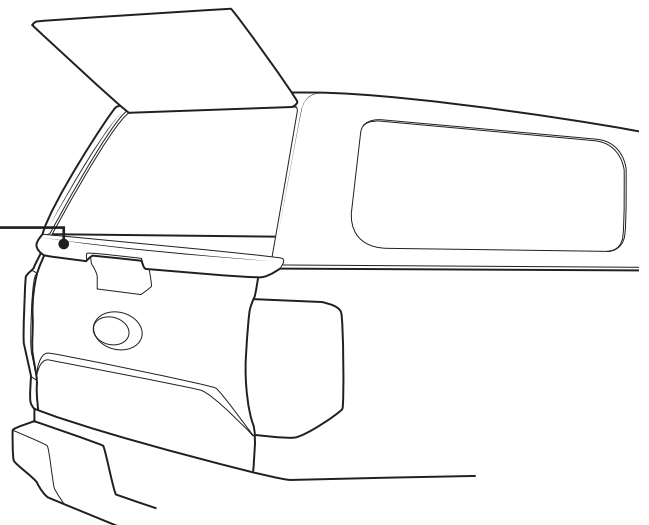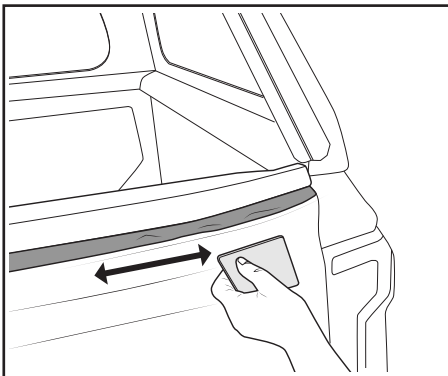

Step 12

Trim outside excess door seal.

Note: Trimming length can vary over the canopy range.
Trim length to suit each fitting.

