


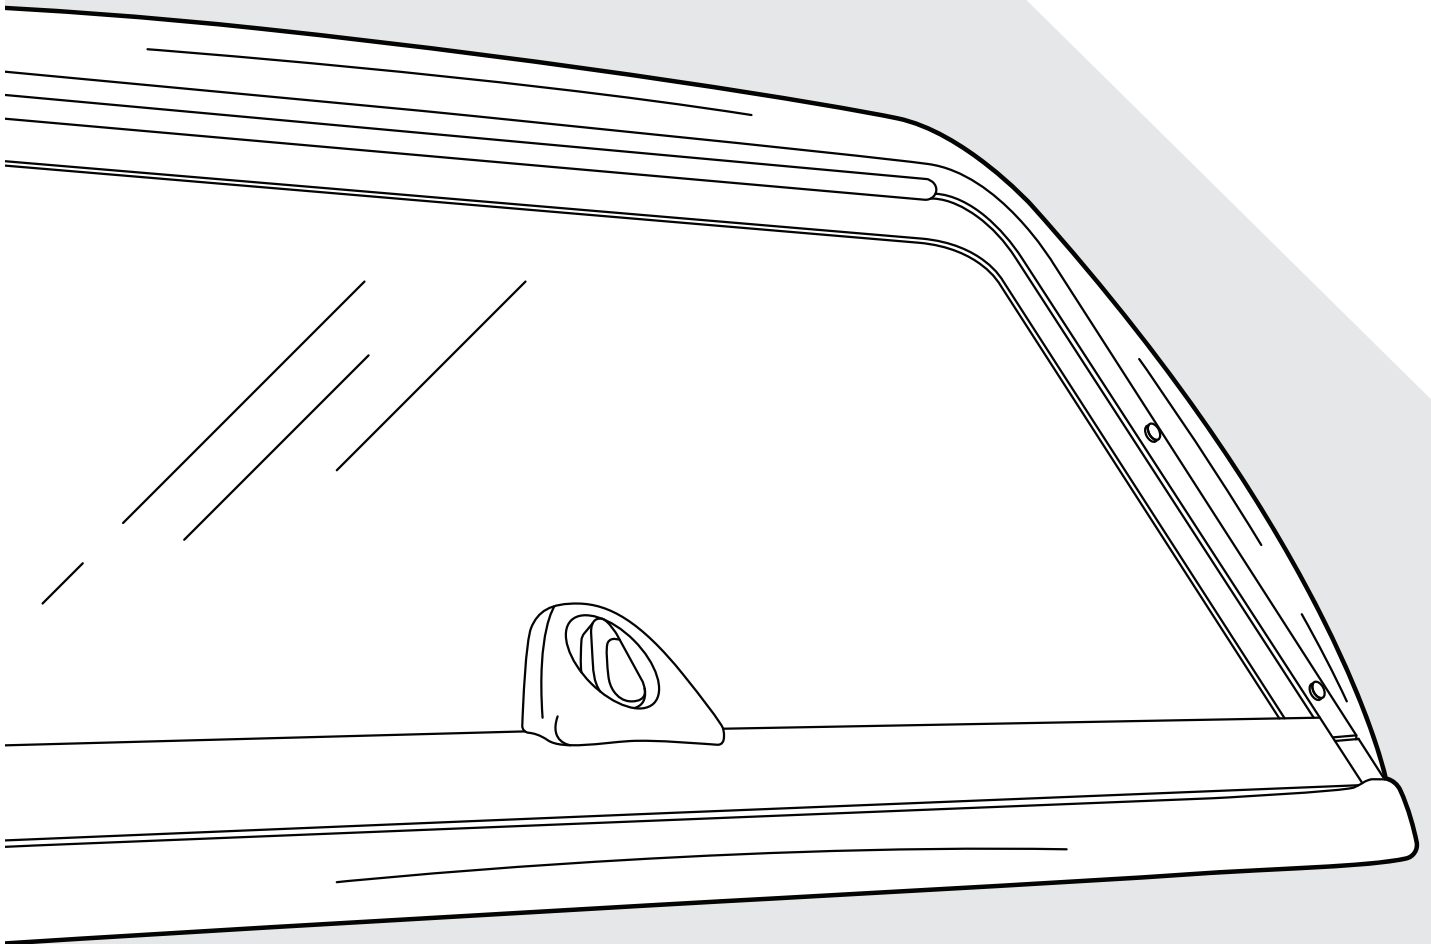


VEHICLE WIRING LOOM

INSTALLATION MANUAL

LDV T60 2017+

COMPONENTS SUPPLIED

Central Locking Vehicle Loom - LV01
Code: C7B-LOOM-LV01

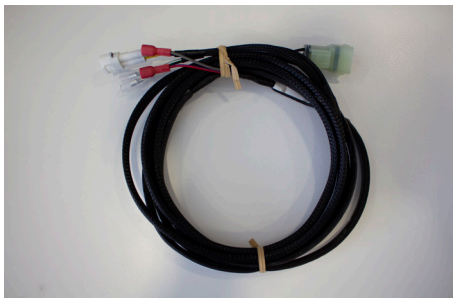

Central Locking Canopy Loom - Generic
Code: C7B-LOOM-001

TOOLS REQUIRED

Wire Cutter



13mm Ratchet Spanner



Long Nose Pliers



Auto Fastener Clip Remover

STEP ONE

Disconnect the battery before you start.
Take off the side kick panel at driver side. Take off the grommet between the vehicle body and driver's door.

**STEP TWO**

Pull the wire harness out from the vehicle body.
Locate the remote connectors – a pair of 22-way white connectors. Unplug them.

**STEP THREE**

Unpack the vehicle loom (Part Number: FEVLT01), locate the patch with two 22-way white connectors. Plug the 22-way white plug from the loom to the 22-way white socket from the wire harness on vehicle. Plug the 22-way white socket from the loom to the 22-way white plug from the wire harness on vehicle.

**STEP FOUR**

Insert the 2-way white connector on the patch through the hole into the side kick panel area. Pull the 2-way white connector out from the hole down the side panel, until the 22-way white connectors are back to the original location where sits between the vehicle body and driver's door.



STEP FIVE

Put back the grommet.

Joint the 2-way white connector to the main loom.

Run the main loom under carpet along the floor to the hole on the floor at back seats.


**STEP SIX**

Feed the loom through the hole, seal the hole with grommet and then continue running the loom underneath vehicle towards the rear right. Cable tie the loom to right chassis where applicable, avoiding any moving parts and any fuel lines, brake lines air conditioning pipes.

Take off the right tail light. Run the loom to the right tail light.

**STEP SEVEN**

Take off the connector on tail light, connect the 8 way plug on the patch loom to the socket on the vehicle wire harness, connect the 8 way socket on the patch loom to the plug on the tail light.

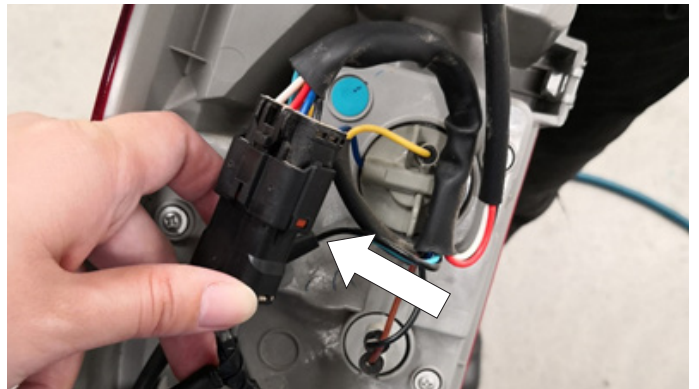**STEP EIGHT**


Insert the single wire from the patch loom to the 6 way plug on the main loom. Tape the exposed wire to the PVC tube.





STEP NINE

Connect the 6-way plug on the main loom to the 6-way socket from the canopy loom.

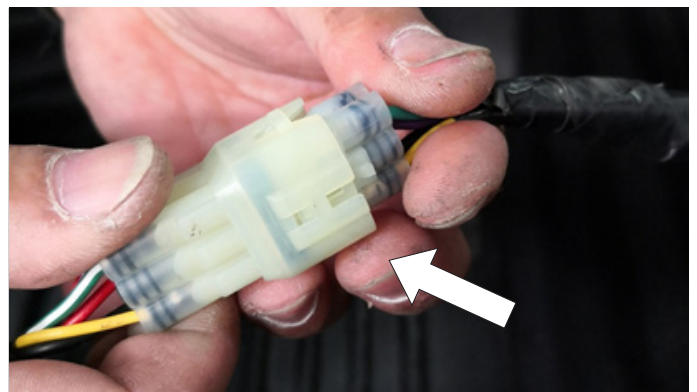


STEP TEN

Go back to the driver's door, locate the fuse box at driver side behind the instrument panel.





STEP ELEVEN

Take off the 25A fuse from fuse box as shown.

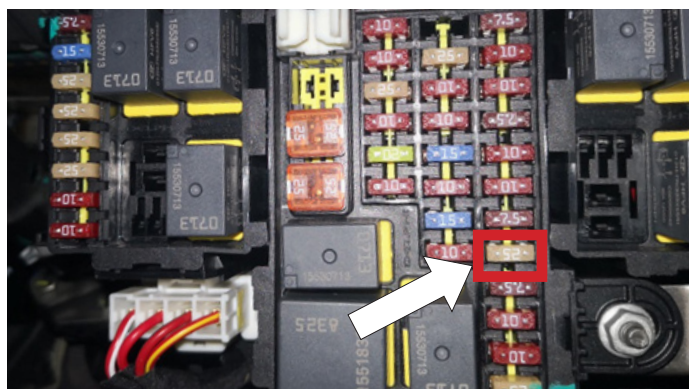

STEP TWELVE

plug the piggyback fuse holder to the place where 25A fuse used to sit.

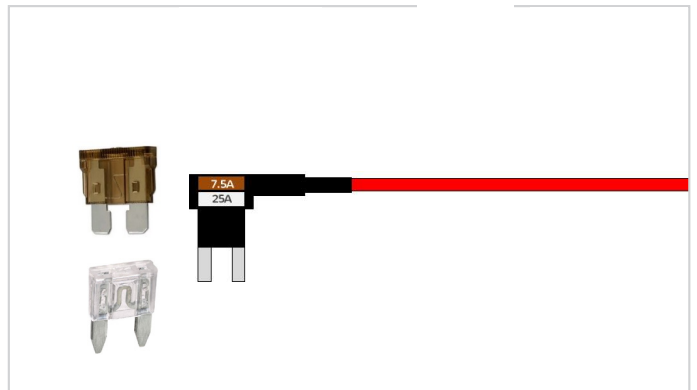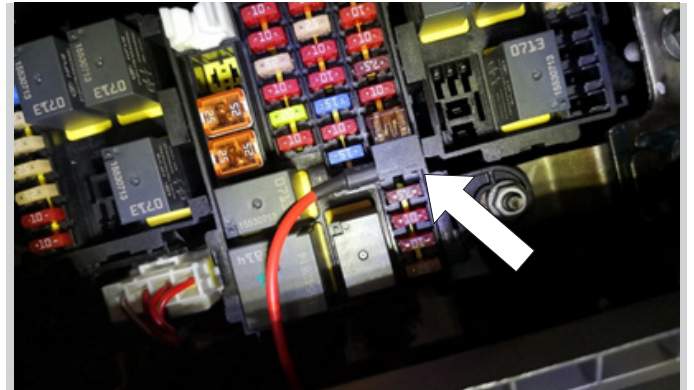
**STEP THIRTEEN**

Screw the earth ring terminal to any stud.

**STEP FOURTEEN**

Close all doors and do function test.
Press lock on remote, check canopy window which should be locked. Press Unlock on remote, check canopy window which should be unlocked.
Get a helper to operate the brake pedal, make sure the brake light works properly.

Make sure all the above checks pass, then proceed to the next step.

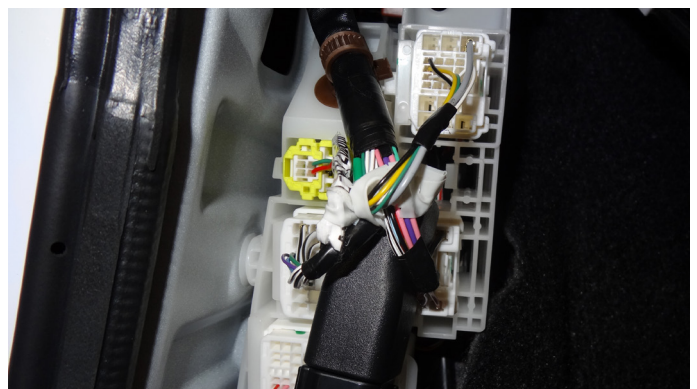

STEP FIFTEEN

(Reconnect the battery before you do the test.)

Close all doors and do a functional test.

- Press Lock on remote, check canopy window which should be locked.
- Press Unlock on remote, check canopy window which should be unlocked.

Make sure all the above checks pass, then put back the LH tail light, refit the kick panel and scuff plates in front door area.





Customer Service (NZ)	0800 111 000
Customer Service (Int.)	+64 7 850 7000 (08:00 - 17:00 NZT)
Support	sales@fullyequipped.co.nz
Website	www.fullyequipped.co.nz
Address	2 Tasman Rd, Te Rapa, 3200, Hamilton, New Zealand